

# Product manual

## 2743 series

### 1. product:

- 1.Read the instructions carefully before installing the product and keep it for reference.
- 2.If buy 1~10v,0~10v,DALI dimmer products,please refer to the 0~10v,1~10v,DALI dimming wiring diagram,if used outdoors,please get connection`s waterproof at least IP65 or above,the wiring mode for the product with or without driver box are the same.
- 3.Before shipment,the no-dimming cable`s waterproof processing has done,if you don`t need to dimming,please do not move the dimmer cable
- 4.Cut off the power supply when install maintain,or disassemble the product to avoid danger, we advise you`d better it by professional.
- 5.Operating temperature is 40°C~+50°C,environment humidity is10%to90%,If beyond the scope it will affect product life
- 6.You cannot use rough cloth to clean products,otherwise you will cause damage to the husk,banned use of corrosive or solubility chemical liquid cleaning products,otherwise,it will damage the protective layer on the surface of a product.
- 7.When the lamp comes of its service life,please seriously do a good job in recycling.You can also ask the local relevant institution or retailer for recycling advice.

### △ Warning:

If the external flexible cable or cord of this luminance is damaged,it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.pay attention to fire,shock.

We reserve to modify product specifications and parameters of power,such as products are subject to change,will not be notified.Quality Assurance:when buying warranty 5 years from the date of the products of our company,such as product quality problems lead to cannot be used,can free return,but the company does not undertake transport costs and,man-made damages or not according to specification requirements to operate the products,we company has no responsible for it

### 2. Installation chart:

#### Wall installation

- 1.The lamp body and the upper and lower 0-75 adjustable,adjustable bracket adjustment screw adjustment to the ideal angle position lock,
2. Install the expansion bolt (M8X80L) in the specified position,and the installation position is required to lift the 20KG(45BLS) above the object can not fall off.
3. The product at the top of the bracket positioning hole penetrates the expansion bolt,and nut the bracket and the expansion bolt,
- 4.According to the requirements of the irradiation angle the fixed bracket is fixed at both ends of the screw to the corresponding angle hole,and then the screw and the nut fastening.
5. In order to meet the waterproof requirement,between the power cord and commercial power,please connect it with waterproof junction box(self-compound),see picture.
- 6 .Please tidy up the power cord, then open the power switch lighting the lamps.



